BANDAI®

bandai.com

TAMAGOTCHI Music Star

Ages 8 and up.
Asst. #26300

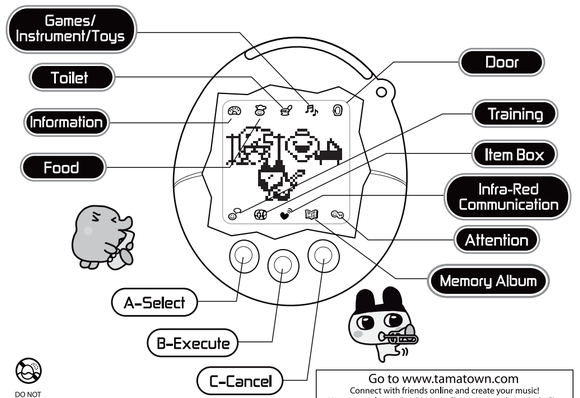

DO NOT IMMERSE IN WATER

Go to www.tamatown.com
Connect with friends online and create your music!
Use your exclusive Gotchi Music Charm pass code in Music City (@ tamatown.com) for a special item!

1 **Tamagotchi® Connection® is an interactive virtual pet that will evolve differently depending on how well you take care of it. In Tamagotchi Music Star, your Tamagotchi will form a band and perform in live concerts to become the ultimate Music Star! Remember, how successful it become depends on how well you take care of it!**

1. **Start by raising one Tamagotchi character and as your character grows older he/she will meet new friends and form a band with two other Tamagotchis.**
2. **Using Gotchi points, you can buy special foods and new items for your Tamagotchi character.**
3. **With a series of passwords, you can visit Tamagotchi's Music City (www.tamatown.com), a new virtual and interactive music world!**
   NOTE: This toy is compatible only with the Music Star website.
4. **You will train your Tamagotchis to become great musicians. Perform in front of judges and test their skills and once you're ready they'll be able to play in live concerts! Compete to become the ultimate Music Star and obtain all the prestigious Music Awards. Try and collect all 8 awards!**

HOW TO WAKE YOUR TAMAGOTCHI

1- Pull out the tab from the side of the casing and your Tamagotchi egg will appear after a long beep..

2- To reset, press the Reset Button on the back of the casing with a pointed object like a pen.
NOTE: Be careful not to apply too much pressure, especially with a sharp object.

3- To set the date and time, press button (B). Day and time screen will appear. Set the month, date, hour and minute by using button (A) to scroll and button (B) to choose.

NOTE: As some special events occur on specific dates, please set up the date carefully. Date is shown as month first then day . Example: June 21 would be 6/21

4- Set your birthday month/date. Your Tamagotchi might celebrate your birthday.

5- Choose a 5 letter user name by using Button (A) to scroll through the alphabet and button (B) to choose.
NOTE: After choosing your user name, you cannot change it.

6- After returning to the normal screen, you will discover an egg that will become your Tamagotchi!

7- Choose an 8 letter name for your Tamagotchi by scrolling through the alphabet. Use button (A) to scroll and button (B) to choose.

THE GROWTH PROCESS

Your Tamagotchis can evolve in different stages depending on how you care for them.

<Life Steps>

HOW TO MAKE YOUR TAMAGOTCHI GROW

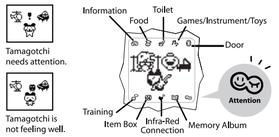

2 When your Tamagotchi needs something, it calls you with a beep and the Attention, Games or Door icon is highlighted. Check the Information button to see if your Tamagotchi is hungry or happy because you can play, feed or train it.

HOW TO TAKE CARE OF YOUR TAMAGOTCHI

TIME & TAMAGOTCHI RANKING INFO

Without selecting an Icon, press button (B) to see Time display. When your Tamagotchi is an Adult, your bands' Star Ranking and number of fans will be displayed underneath the time clock.

NOTE : You can raise your number of fans by: playing your instrument, playing games and performing well at a concert. Once you reach the ultimate Music Star status, you will receive an award from the Tamagotchi King.

INFORMATION

Select the "Health Meter Icon" with button (A) to check the following information regarding your Tamagotchi and band members:

<PLAYER INFO>

- **LEVEL OF HUNGER / HAPPINESS / STRESS**
  The number of hearts you have indicates your Tamagotchi's Hunger and Happiness (the more you receive, the better!).
  When your Tamagotchi's stress level is high it will stop practicing its instruments or skip its concerts.
  Keep your Tamagotchi's stress level low to keep them happy (highest stress level is 99)!

- **MUSIC SKILL POINTS**
  Keep track of your music skill points (Tone/Rhythm/Original). Points can be earned by playing mini games, practicing instruments and other actions. Music skill points will influence your Tamagotchi's musical career!

- **FAVORITE INSTRUMENT AND MUSIC GENRE**
  Favorite instrument and music genre for the Tamagotchi are displayed. There are 8 different music genres.
  NOTE : Music genre could change if you practice with different types of instruments.

- **CHARACTER TYPE/GENERATION/GOTCHI POINTS/USER NAME**
  Here you can check the type and current family generation. If your Tamagotchi receives an egg, it will hatch and become the next generation of your Tamagotchi family.
  You can also view how many Gotchi points you've earned and you can use these Gotchi points to shop.
  If your Tamagotchi becomes a famous musician, you might earn more Gotchi points!

- **AGE/WEIGHT/NAME**
  Every day your Tamagotchi lives, it becomes 1 year older. Keep it healthy and don't allow its weight to get too high.

<BAND INFO>

- **BAND NAME / MEMBER INFO**
  You can see your band and check on your members by pressing button (A) and choosing BAND

- **CHANGE INSTRUMENTS**
  When the member info is on display, press button (B) to change the instruments he/she plays. You may receive new instruments as a present from the Gotchi King or from the teacher.
  NOTE: You may also purchase new instruments at tamatown.com!

FOOD

Press button (A) to select the "Food Icon" and choose from a variety of meals or snacks. Use Gotchi points to buy additional food items.

3

<BABY FOOD AND BABY'S MILK>

Baby food and baby's milk will always be available for your Tamagotchi to eat and drink, but you should purchase different food items as your Tamagotchi gets older.

TOILET/FLUSH

When your Tamagotchi makes a mess, press button (A) to select the "Toilet Icon" and use button (B) to clean up.

GAMES /INSTRUMENT/TOYS

When your adult Tamagotchi calls for you and the Games Icon is highlighted, select this Icon. You can perform at a concert, play games, or change instruments and toys.

- **MUSIC GAMES**
  Press button (A) to select the "Games Icon" and press button (B) to select.
  Then select "MUSIC GAME" with button (B) to choose a game to play.

▶ SING A SONG
First, listen and memorize the melody example. Then it's your turn to play the same song using 3 buttons. Songs will get harder as you proceed through each level.

▶ MUSIC NOTES
Get rid of falling notes by selecting the correct notes. Use button (A) to select the right notes and press button (B) to eliminate the falling notes.

▶ SOUND BLOCK
Jump from block to block (which will come and go randomly) and keep going until you reach the goal block. Use button (A) to jump left and button (C) to jump right. When the number in the block reaches 0, it will disappear. Be careful not to fall off.

- **SELECT INSTRUMENT/TOY**
  Press button (A) to select the "Games Icon" and press button (B) to select.
  Then select "INSTRUMENT" or "TOY" with button (B) to change items in your room.
  Press button (A) to select the instrument/toy you want in your room.

<SELECTING THE RIGHT INSTRUMENT AND TOY IS VERY IMPORTANT!>

Your Tamagotchi will play its own instrument or toy on its own. Playing with its instrument will raise its music skills and playing with its toy will lower its stress level. Each Tamagotchi has its favorite instrument and toy, but if it does not like its toy, its stress level may go up!

DOOR

When Tamagotchi calls for you and the Door Icon is highlighted, select this Icon because there is probably a guest at the door.
Other times, select the "Door" with button (A) to choose the destination: AWAY・SHOP・PC.

- **AWAY**
  Where you can go by selecting "AWAY" is different depending on your Tamagotchi's growth process. When you are away you can play additional games

▶ Preschool (Children ONLY)
You can play jump-rope with your teacher and friends by pressing button (A) to jump.

▶ Music school (Teenager ONLY)
The first time you go to Music school, you will meet 2 friends and form a band with them!
At Music School, you may take lessons and play music games.

4 Play a mini game with your character! When music notes appear on your screen, follow the notes by using the correct buttons. Press button (A) to go left, (B) center and (C) to go right.
By attending school, your MUSIC SKILL will increase and you will also have a strong friendship bond.

<CONTEST TIME>
When your Tamagotchi is an Adult, its music teacher will enter your band into 3 auditions. Your performance will be reviewed by a panel of judges that will evaluate your skills. There will be other chances if your band does not pass an audition.
Note: If there are several unsuccessful auditions, your band may become street musicians and will not earn enough Gotchi Points!

▶ Music Studio (Adult & Senior Stage ONLY)
Practice with your band members at the Music Studio. Follow the beats that move across the screen by pressing the correct buttons. Press button (A) for the beat on top, press button (B) for the middle beat and button (C) for the bottom beat. If two notes appear, press the 2 buttons at the same time.

▶ Cake Shop (Adult & Senior Stage ONLY)
The correct cake is displayed in the upper right hand corner and you can grab the cake if you time it right! Press button (A) to move the claw down.

▶ Fruit Harvest (Adult & Senior Stage ONLY)
You can earn Gotchi points by working part-time. Use button (A) and (C) to move the box from left to right. Match the fruit in their correct boxes.

- **SHOP**
  After choosing the "Door Icon," select "SHOP" with button (B) to shop for items.

You can choose items on the screen by using button (A) to scroll and button (B) to select.
Different items will be available from time to time.

- **PC**
  After choosing the "Door Icon," select "PC" with button (B) to enter the Tamagotchi Music Star website.
  (www.tamatown.com).
  To enter the Tamagotchi Music City, you will need the 14-digit LOGIN number available on-screen.
  NOTE: To avoid losing the saved data in your toy, do not press any buttons while viewing your 14-digit password; your toy will remain PAUSED during your visit to the Tamagotchi Music City.

There are some items you can get from the website and send to your Tamagotchi Toy. If you get a 6-digit item password on the website, press button (A) on LOGIN/PASSWORD display and enter the item password. You will get the item when you log out.

Note: Gotchi Music Charm exclusive code is for online use only. Not for toy.

After visiting Tamagotchi's Music City, you will be provided with a new 12-digit LOG OUT number. Press button (B) to bypass your LOG IN number and to enter the new LOG OUT number. Use button (A) to scroll through the digits and button (B) to select. You may use button (C) to erase.

TRAINING

Use button (A) to select the "Training Icon" to train your Tamagotchi. Select an activity from the 4 choices by using button (B). Use the 4 different commands wisely and you can improve your Tamagotchi's music skills and reduce its stress.

- **PRACTICE**
  You can instruct you Tamagotchi to practice playing its instrument.
  Note: Practicing adds stress and when its stress level is too high, your Tamagotchi may not listen to your commands.

5

- **PLAY**
  Let Tamagotchi play and its stress level will lower.
  NOTE: While playing, music skills will gradually decrease! Be careful not to let it play too much!

- **TIME OUT**
  When your Tamagotchi refuses your commands or plays too much, you can discipline it by having a Time Out.
  Note: Too much discipline will incur a lot of stress so be careful!

- **PRAISE**
  When your Tamagotchi is playing an instrument or performs well at a concert you should praise it.
  Note: This will lower its stress level and will make it happy!

ITEM BOX

The Item Box will keep and store tools and items (except Toys and Instruments) that you will need to care for you Tamagotchi. It contains 3 categories.

- **MEDICINE**
  When the "Skull Icon" or "Tooth Icon" appears, your Tamagotchi is sick. Use button (A) to select the "Item Box Icon" and button (B) to select "MEDICINE" to nurse them back to health.
  Sometimes it may take more than one dose of medicine!

- **SPECIAL**
  "SPECIAL" contains the items you have purchased or items you have received as gifts. To use an item, select it with button (A) and then press button (B). Tamagotchi love to play with many different items!
  NOTE: Not all the characters can play with all the items. Try them with different characters.

- **TRASH**
  If you have too many items, you can throw them away. Use button (A) to choose an item to throw away and press button (B) to select.

INFRA-RED COMMUNICATION

Connect with another Tamagotchi Music Star or a Tamagotchi V5 owner using the IR Sensor. Connection is not possible with old (ex, V3. V4. V4.5) versions.
Press button (A) to select "IR Communication" icon then...
・To connect with another Tamagotchi Music Star
1 - Press button (B) to select "Music Star".
2 - Choose "Game" or "Present".
3 - "Stand By" will appear on the screen.
4 - Position both toys together with the IR sensors facing them each other (See illustration).
5 - Press button (B) to begin IR communication.
・To connect with a Tamagotchi V5
1 - The owner of the Tamagotchi V5 has to press button (B) to select V5".
2 - If it is the first time you are connecting with each other, choose "Game" to start building the relationship.
3 - The owner of the Tamagotchi Music Star has to press button (B) to select "Others".
4 - "Stand By" will appear on both screens.
5 - Position both toys together with the IR sensors facing them each other (See illustration).
6 - The owner of the Tamagotchi V5 has to start the connection by pressing button (B) to begin IR communication.

GAME- Play a game with your friend. Each game will be chosen randomly.
PRESENT- Send a gift to your friends! To send an item, one player has to choose "Give" and another player has to choose "Take". The "Give" player has to select an item to give with button (B).

6

MEMORY ALBUM

Use button (A) to select the "Memory Album Icon" and button (B) to view your list of awards, friends and memory.

- **AWARDS**
  Use button (B) to choose "Awards". Press button (A) to select your awards. To check the information about your award, press button (B) on the trophy. There are 8 genres and 8 awards total. Can you get all of the awards?

- **FRIENDS**
  Use button (B) to select a "Friend." Press button (B) again to check your level of friendship. Your friendship level improves with the more connections you make with other Tamagotchis.
  When your friendship level gets really high, characters can get married. You might get a great wedding gift from your teacher.

- **MEMORY**
  View your Tamagotchi heritage. Press button (B) to select "Memory" to view your previous Tamagotchis that are no longer under your care.

< TAMA TIPS >

▶ ABOUT MUSIC GENRE
In Tamagotchi Music Star, there are 8 music genres. There is POP, ROCK, HIP-HOP, R&B, CLASSIC, JAZZ, LATIN and ASIAN MUSIC. What type of music your Tamagotchi likes depends on what instrument your Tamagotchi plays. If you change the instrument, your favorite genre will change and the music it plays at the concert will change.

▶ LIGHTS OUT
At night, your Tamagotchi will sleep. Press any button to turn off the light.

▶ THE MATCHMAKER
・If your Tamagotchi grows old and hasn't found a partner, a "BAND MANAGER" may suggest a partner for you! Press any button when he comes and he will present a potential partner. Press button (B) to select "YES" or "NO". If you are unable to find a suitable partner, your Tamagotchi will continue to grow old until it passes away.
・If a partner is found, a new egg representing the next generation will appear.

After the first 24 hours the parents will return to Tama Planet. You can name your new Tamagotchi generation. Second generation Tamagotchi's can inherit music skills and some assets from its parents. Together, you can collect many awards.

▶ IF YOUR TAMAGOTCHI HAS GONE……
If you don't take proper care of your Tamagotchi, sometimes they can get angry and return to their home on Tama Planet. To start over, press and hold buttons (A) and (C) together until a new egg appears. It will hatch after a few minutes.

▶ RESET OPTION
When to reset?
- The first time you activate your Tamagotchi.
- When the image/screen freezes or does not move after several minutes.
- When you change the battery. After pressing the RESET button, choose either "DOWNLOAD" or "RESET". If you select "RESET", Tamagotchi will start over and your memory will be erased (Gotchi points, items, awards, friends, etc).

▶ HOW TO SET UP TIME
- To change the time, press button (B) to view the current time. Press and hold buttons (A) and (C) together until the date begins to flash.
  Use button (A) to scroll and button (B) to choose/set.
  Note: You can check the birthday while you're setting time but you cannot change it.

7

▶ SOUND ON/OFF
Press and hold buttons (A) and (C) together. Select sound ON or OFF.

▶ HOW TO ADJUST CONTRAST
To change contrast, press button (B) to view the contrast level.
Press and hold buttons (B) and (C) together. Select contrast level to press button (A) and (B).

PAUSE MODE

- Press and hold button (A), then press button (B). "Pause" will appear on screen above your Tamagotchi character. While in PAUSE mode, the clock continues to run, but Tamagotchi's growth stops until you take it out of pause mode.

- **To take Tamagotchi out of pause mode:**
  Press and hold button (A), then press button (B). "PAUSE" will disappear from the screen and your Tamagotchi will begin to move again.

▶ HOW TO REPLACE BATTERY
If you replace a battery, your data will be saved. You can download your data and resume from your last play.
Requires 1 CR-2032(3V) battery. Using a small screwdriver, turn the screw counter clockwise to loosen. Remove back as shown, and remove the old battery. Insert the new battery as shown.
NOTE: Make sure you use a new battery.
NOTE: You will NOT need to change the battery before using your Tamagotchi for the first time.
NOTE: If you turn off sound, this may increase your battery life.
CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed.



⚠ CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) hit anyone with toy, 2) poke anyone with toy, 3) swing toy at anyone, 4) step on toy.

⚠ WARNING:
CHOKING HAZARD - Small parts. Not for Children under 3 years.

⚠ CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed. Requires 1 CR-2032 (3V) battery. Battery included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

Conforms to safety standard ASTM F963. Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. TM & © 2009 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION and all related logos, names and distinctive likenesses thereof are the exclusive property of Bandai. © Bandai, WIZ 2004-2009. All rights reserved.